



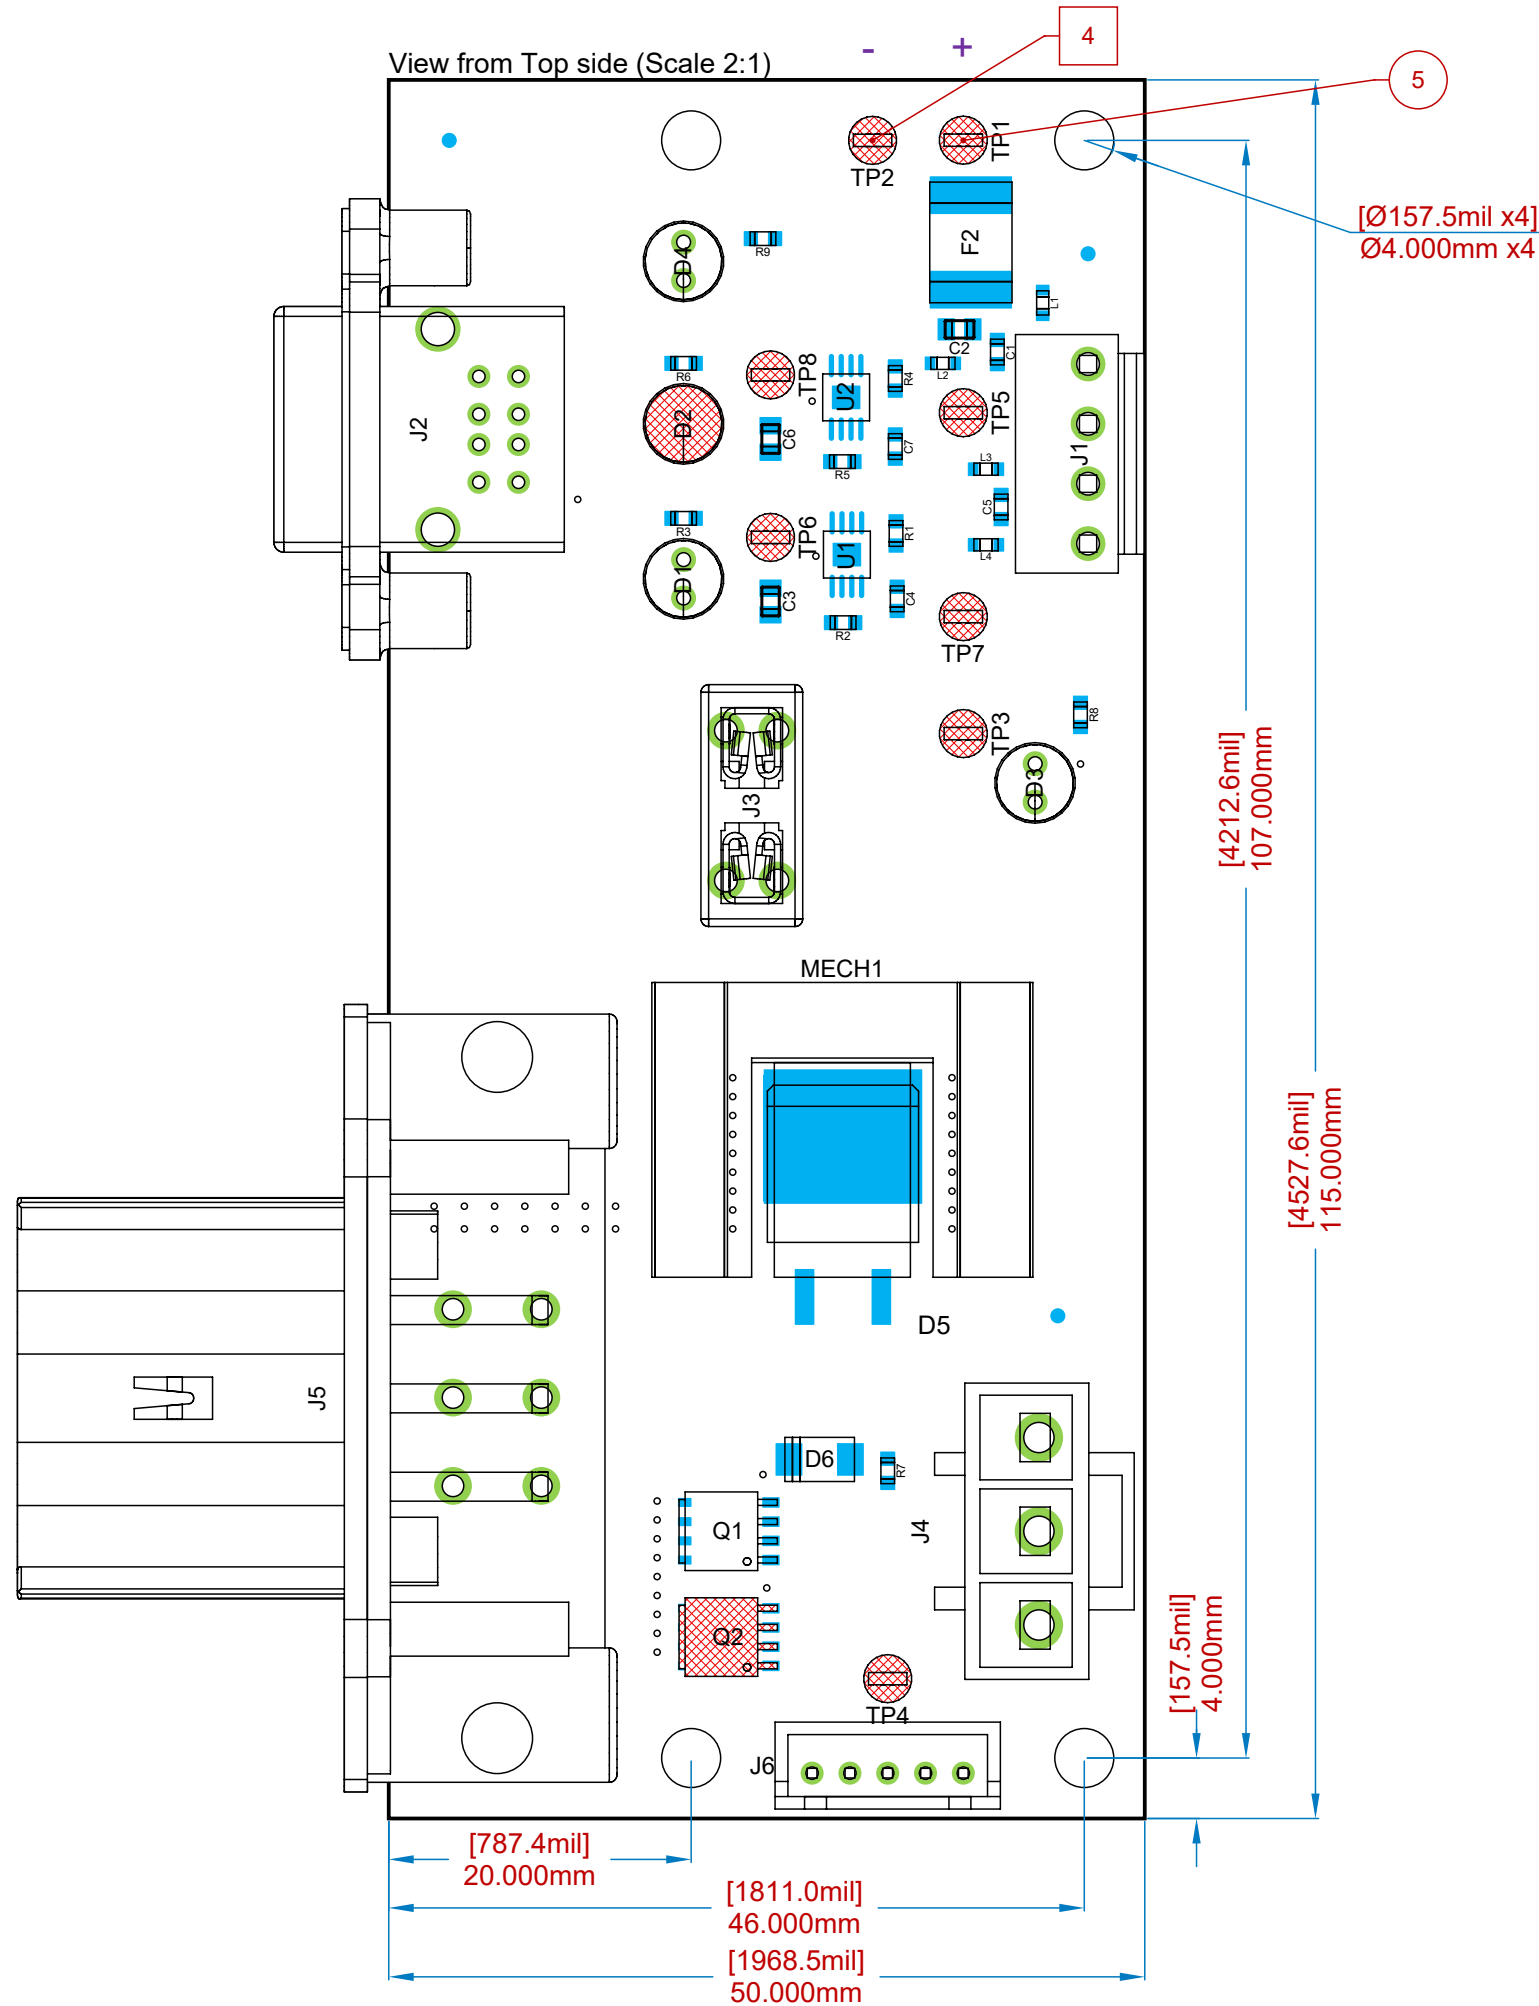

View from Front side (Scale 1:1)

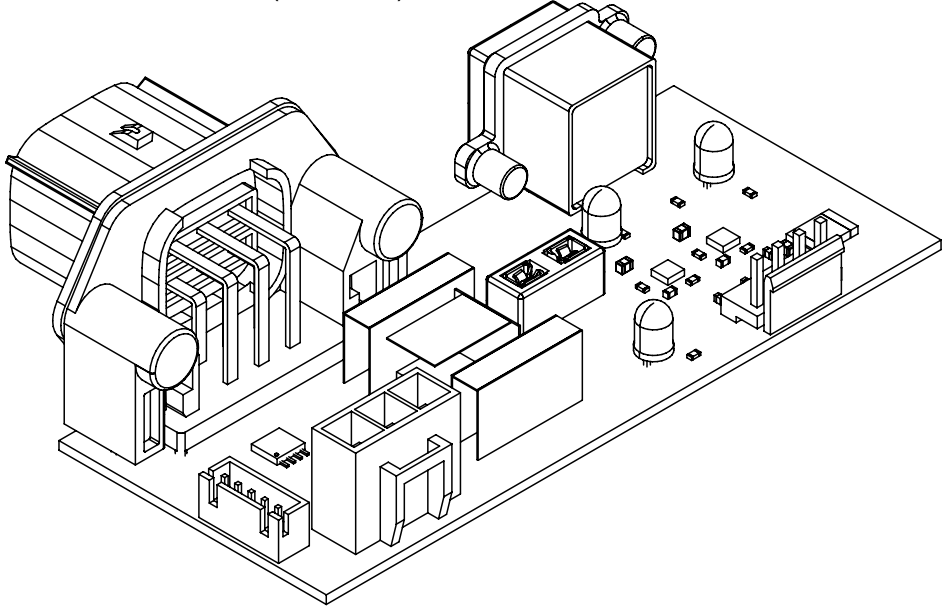

Notes:

- Red cross-hatched components are omitted.
- Green are through-hole pads.
- Blue are SMT pads.
- Solder 9" black AWG 18 wire into TP2. Crimp QC female on other end, to connect to negative terminal of automotive socket.
- Solder 9" red AWG 18 wire into TP1. Crimp QC female on other end to connect to positive terminal of automotive socket.
- Use General Cable C2103A AWG18 16/30 600V or equivalent.

Black at DigiKey: <https://www.digikey.com/product-detail/en/general-cable-carol-brand/C2103A.12.01/C2103B-100-ND/16180>
 Red at DigiKey: <https://www.digikey.com/product-detail/en/general-cable-carol-brand/C2103A.12.03/C2103R-100-ND/16188>

New Horizons, GHL

PROJECT
MF2 Solar Aux. Output

REV
3.3

Rod Hinman
808-989-0977
rod@auroraresearch.com
2019-01-10